
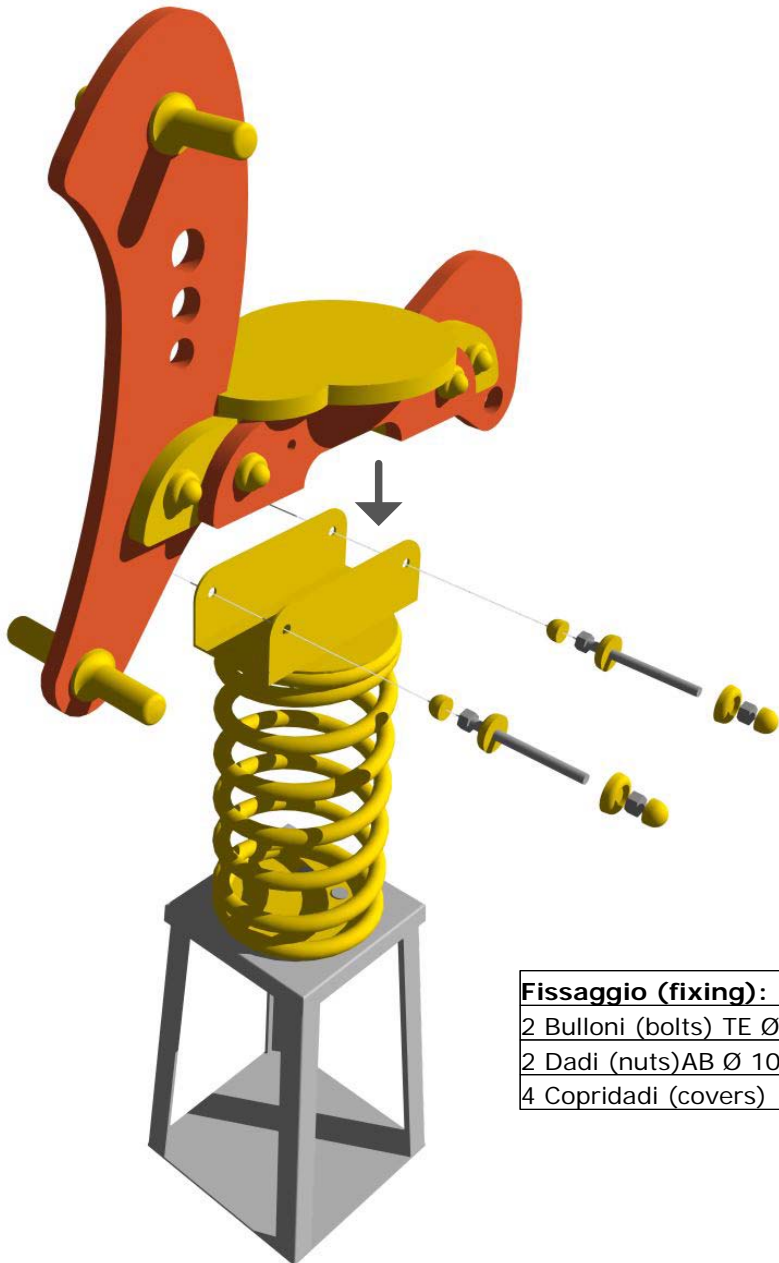
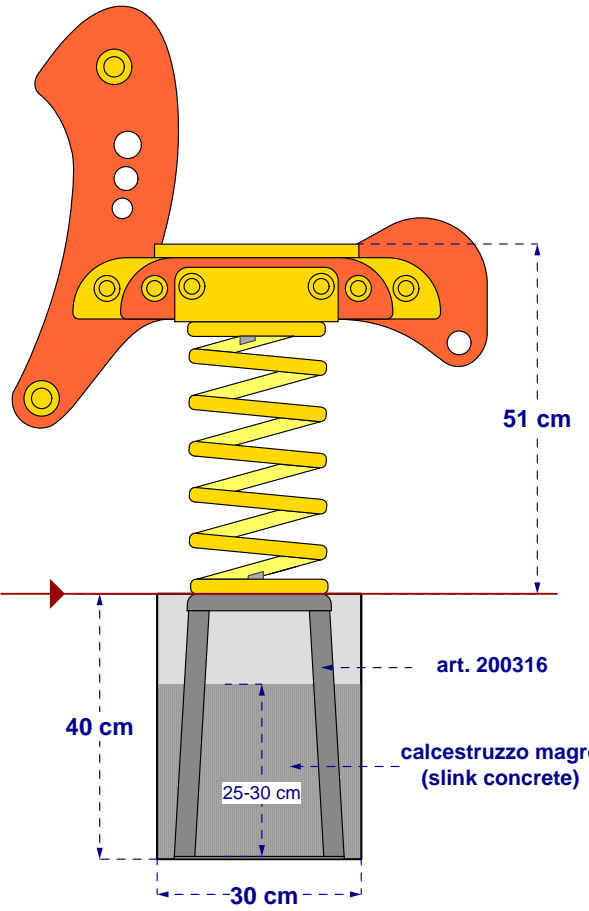


LEGNOLANDIA

THINK SPRING - Rev 0

ISTRUZIONI DI MONTAGGIO

ASSEMBLY INSTRUCTIONS

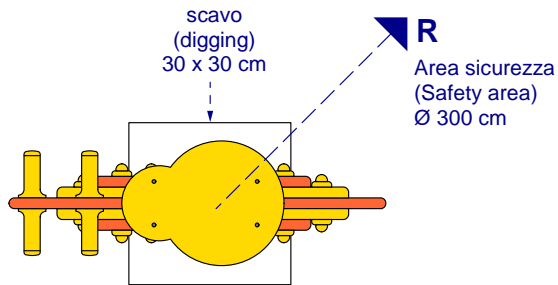

Fissaggio (fixing):
2 Bulloni (bolts) TE Ø 10x130 mm
2 Dadi (nuts) AB Ø 10 mm
4 Copridadi (covers)

Articoli Correlati (correlated items)

Art. 011401



Art. 011403



Art. 011407



Art. 011405



Art. 011409

